



## SG902



### Screw-on type grease cartridge adaptor for Air Grease Gun

- + To use with Lube-Shuttle® screw-in cartridges
- + Fits other screw-on type grease cartridges
- + Ø18mm and Ø31mm
- + Advantages: Visibility of the remaining grease level. Visible label on the cartridge to identify the grease easily. Resealable cartridge. No wasted grease. Once empty, the cartridge can be replaced quickly and cleanly.
- + 1. Select the adapter according to the diameter of the cartridge
- + 2. Remove the metal tank from the grease gun
- + 3. Screw the adapter onto the grease gun
- + 4. Screw the grease cartridge into the adapter
- + 5. Prime the cartridge by pushing the grease
- + 6. Connect the grease gun to a pneumatic system and pull the trigger

